


Temperature Valve Actuator Replacement - Right Side

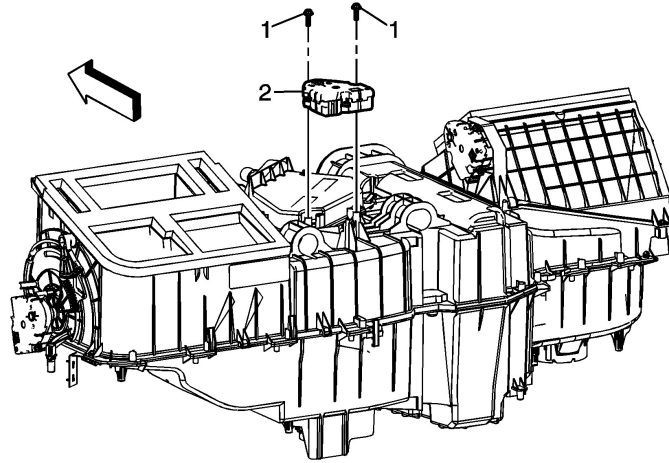

Callout	Component Name
<p>Notice: In order to avoid actuator damage, DO NOT apply power to the actuator when it is not installed in the HVAC module.</p> <p>Preliminary Procedure</p> <ul style="list-style-type: none"> Remove the Inflatable Restraint I/P Module. Refer to Inflatable Restraint Instrument Panel Module Replacement . Disconnect the electrical connector from the air temp actuator. 	
1	<p>Air Temp Actuator Screws (Qty: 2)</p> <p>Notice: Refer to Fastener Notice in the Preface section.</p> <p>Tighten 1.6 N·m (14 lb in)</p>
2	<p>Air Temp Actuator</p> <p>Procedure</p> <p>Re-calibrate the air temp actuator. Refer to Actuator Recalibration .</p>

