


Headlining Trim Panel Replacement (SUT)

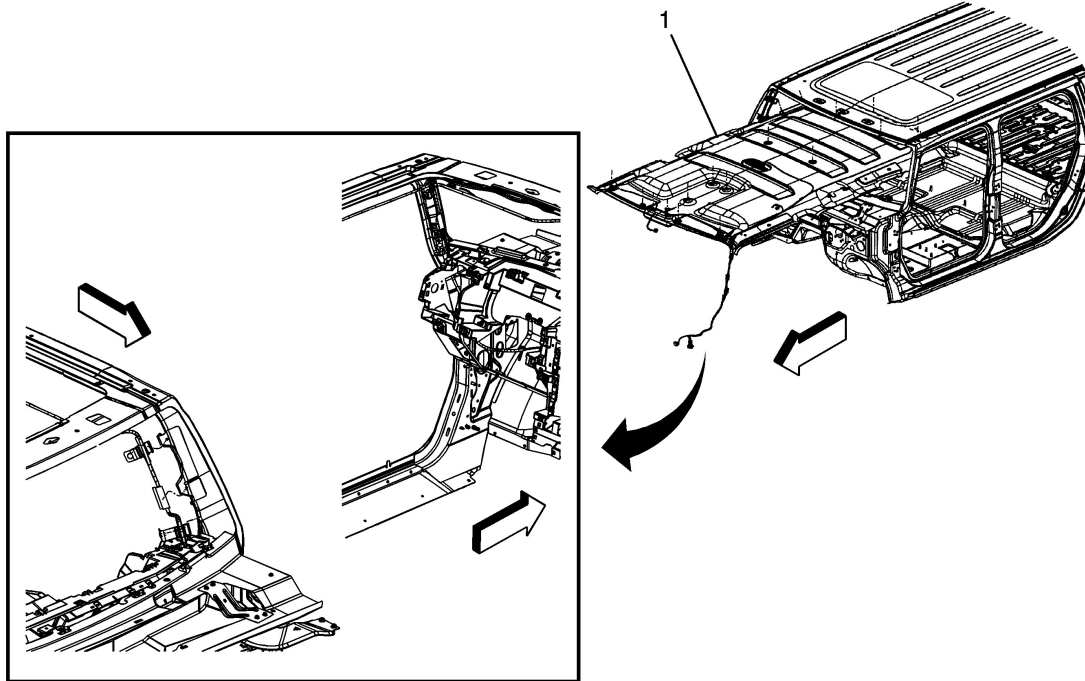

Callout	Component Name
<p>Caution: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.</p> <p>Preliminary Procedures</p> <ul style="list-style-type: none"> • Remove the windshield. Refer to Windshield Replacement . • Remove the instrument panel (I/P) upper trim pad. Refer to Instrument Panel Upper Trim Pad Replacement . • Remove the sunshades. Refer to Sunshade Replacement . • Remove the sunshade anchors. Refer to Sunshade Anchor Replacement . • Remove the overhead console. Refer to Roof Console Replacement . • Remove the windshield pillar garnish moldings. Refer to Windshield Pillar Garnish Molding Replacement . • Remove the hinge pillar trim panels. Refer to Body Hinge Pillar Trim Panel Replacement . • Remove the lock pillar trim panels. Refer to Body Lock Pillar Trim Panel Replacement . • Remove the front assist handles. Refer to Front Assist Handle Replacement . 	

© 2020 General Motors Corporation. All rights reserved.

- Remove the rear assist handles. Refer to [Assist Handle and Rear Coat Hook Replacement](#) .

1	<p>Headliner</p> <p>Procedure</p> <ul style="list-style-type: none">• Disconnect all the electrical connectors.• Remove all the plastic push pin retainers from the headliner.
---	--