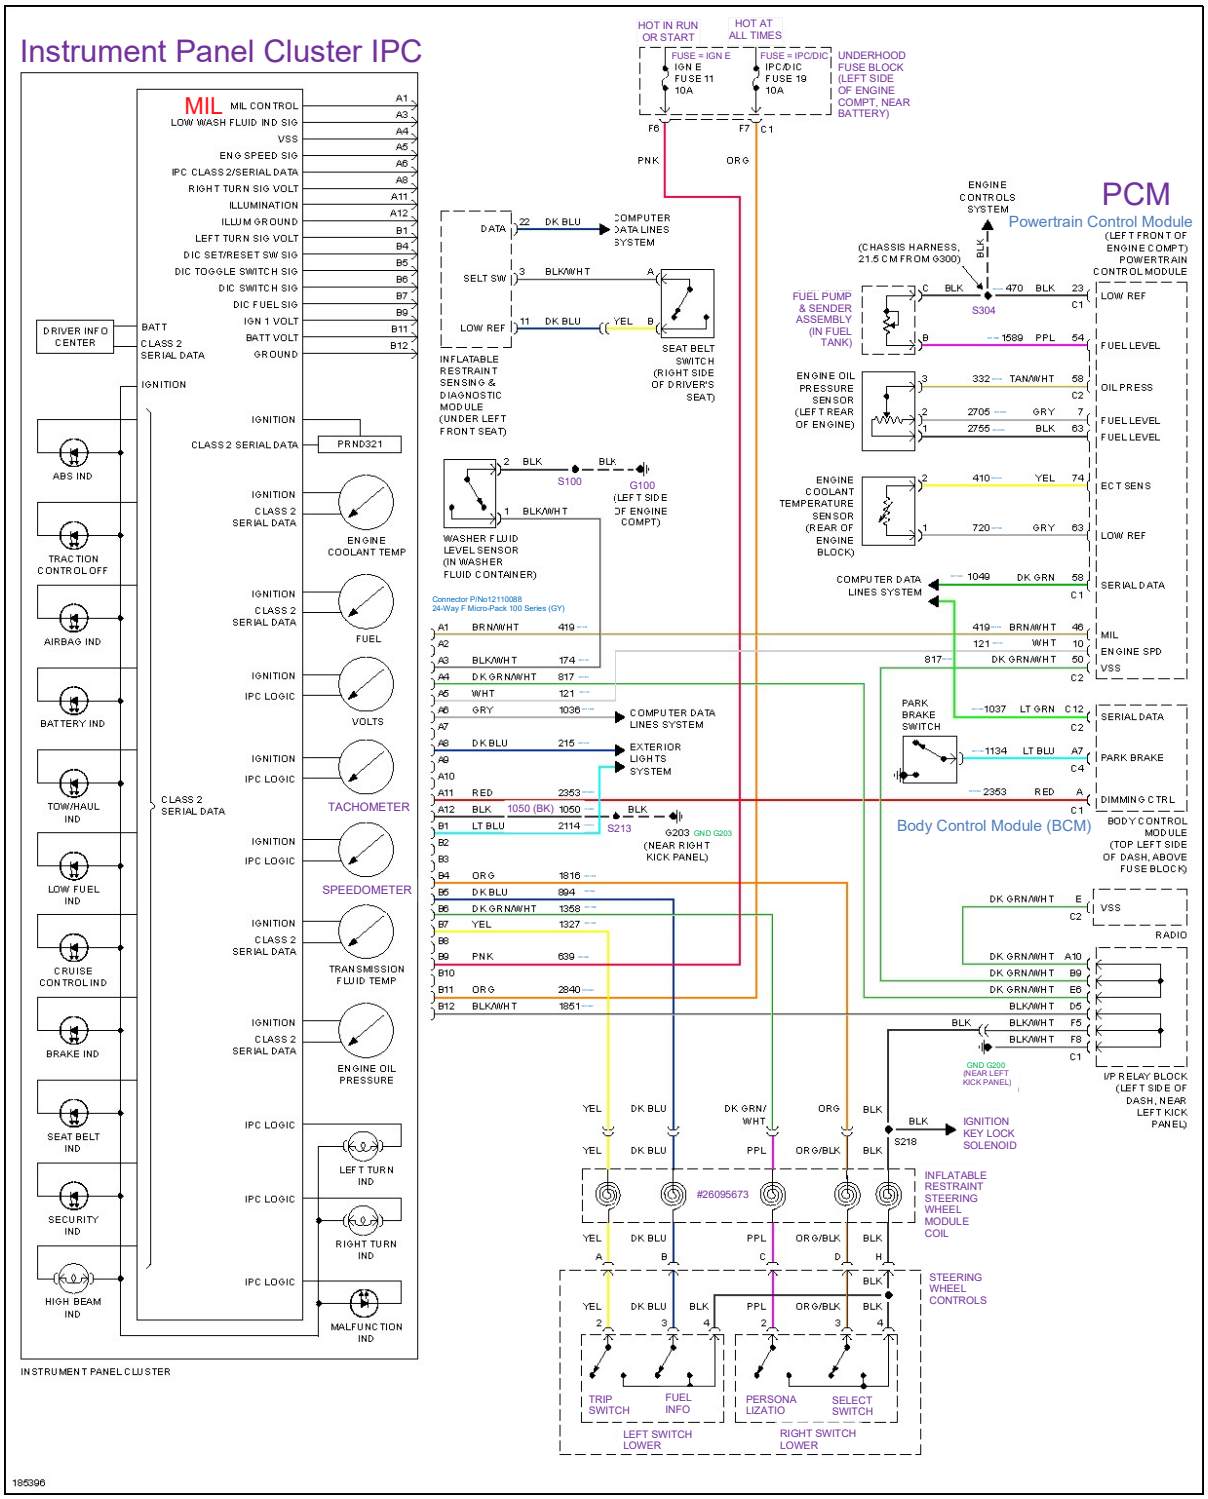
Instrument Panel Cluster IPC
MIL
MIL CONTROL
LOW WASH FLUID IND SIG
VSS
ENG SPEED SIG
IPC CLASS 2/SERIAL DATA
RIGHT TURN SIG VOLT
ILLUMINATION
ILLUM GROUND
LEFT TURN SIG VOLT
DIC SET/RESET SW SIG
DIC TOGGLE SWITCH SIG
DIC SWITCH SIG
DIC FUEL SIG
IGN 1 VOLT
BATT VOLT
GROUND
DRIVER INFO CENTER
BATT
CLASS 2 SERIAL DATA
IGNITION
PRND321
ABS IND
TRACTION CONTROL OFF
AIRBAG IND
BATTERY IND
TOW/HAUL IND
LOW FUEL IND
CRUISE CONTROL IND
BRAKE IND
SEAT BELT IND
SECURITY IND
HIGH BEAM IND
ENGINE COOLANT TEMP
FUEL
VOLTS
TACHOMETER
SPEEDOMETER
TRANSMISSION FLUID TEMP
ENGINE OIL PRESSURE
LEFT TURN IND
RIGHT TURN IND
MALFUNCTION IND
IPC LOGIC
INSTRUMENT PANEL CLUSTER
HOT IN RUN OR START
HOT AT ALL TIMES
FUSE = IGN E
IGN E FUSE 11 10A
FUSE = IPC/DIC
IPC/DIC FUSE 19 10A
UNDERHOOD FUSE BLOCK (LEFT SIDE OF ENGINE COMPT, NEAR BATTERY)
PNK
ORG
DATA
SELT SW
LOW REF
DK BLU
BLK/WHT
YEL
COMPUTER DATA LINES SYSTEM
SEAT BELT SWITCH (RIGHT SIDE OF DRIVER'S SEAT)
INFLATABLE RESTRAINT SENSING & DIAGNOSTIC MODULE (UNDER LEFT FRONT SEAT)
S100
G100 (LEFT SIDE OF ENGINE COMPT)
WASHER FLUID LEVEL SENSOR (IN WASHER FLUID CONTAINER)
Connector P/No12110088
24-Way F Micro-Pack 100 Series (GY)
BRN/WHT
BLK/GRN/WHT
DK GRN/WHT
WHT
GRY
DK BLU
RED
LT BLU
1050 (BK)
S213
G203 GND G203
(NEAR RIGHT KICK PANEL)
ORG
PNK
YEL
PPL
ORG/BLK
BLK
ENGINE CONTROLS SYSTEM
PCM
Powertrain Control Module
(LEFT FRONT OF ENGINE COMPT)
POWERTRAIN CONTROL MODULE
(CHASSIS HARNESS, 21.5 CM FROM G300)
S304
FUEL PUMP & SENDER ASSEMBLY (IN FUEL TANK)
ENGINE OIL PRESSURE SENSOR (LEFT REAR OF ENGINE)
ENGINE COOLANT TEMPERATURE SENSOR (REAR OF ENGINE BLOCK)
COMPUTER DATA LINES SYSTEM
LOW REF
FUEL LEVEL
OIL PRESS
ECT SENS
SERIAL DATA
MIL
ENGINE SPD
VSS
PARK BRAKE SWITCH
PARK BRAKE
DIMMING CTRL
Body Control Module (BCM)
BODY CONTROL MODULE (TOP LEFT SIDE OF DASH, ABOVE FUSE BLOCK)
RADIO
GND G200 (NEAR LEFT KICK PANEL)
I/P RELAY BLOCK (LEFT SIDE OF DASH, NEAR LEFT KICK PANEL)
S218
IGNITION KEY LOCK SOLENOID
#26095673
INFLATABLE RESTRAINT STEERING WHEEL MODULE COIL
STEERING WHEEL CONTROLS
TRIP SWITCH
FUEL INFO
PERSONA LIZATIO
SELECT SWITCH
LEFT SWITCH LOWER
RIGHT SWITCH LOWER
185396